


Remoter controller for BLU-ROVE

● product drawing

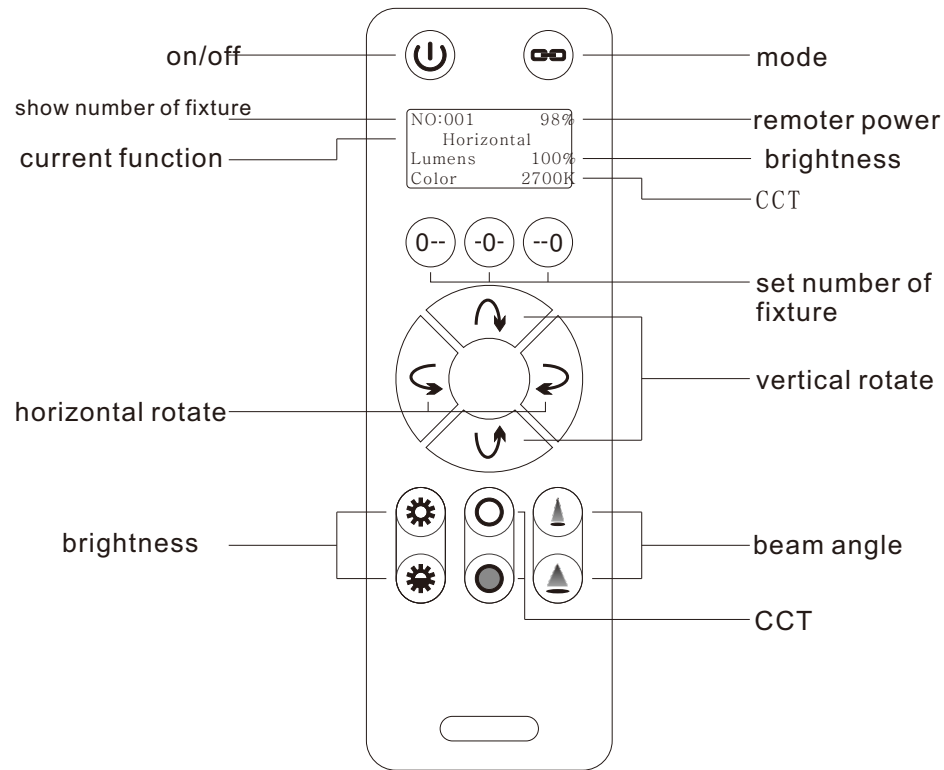

button using explanation

- On/off: press for fixture on/off, long press for all function deleted and back to original stage.
- Setting fixture number: from left to right side: tens/hundreds/thousands. single press for changing numbers.
- Mode: long press for 3 seconds go to the showing mode, single press to start the showing mode, the fixture will need around 2 minutes back to original stage; single press again to stop the showing mode when fixture already in showing mode.
- Vertical rotate: rotating of vertical direction of $\pm 90^\circ$.
- Horizontal rotate: rotating of horizontal direction of 350° .
- Brightness change: Min brightness value 5% ~ 100%, single press button for $\pm 5\%$. quick change by long press button.
- CCT change: from 2700K ~ 5000K, single press button for $\pm 200K$. quick change by long press button.
- Beam angle change: from 20° ~ 60° .

● remark

1. its possibly the remoter need to be charged when the screen is not displaying. pls charge it in time. the power charge USB is in the right side of remoter. common Android power cable is available. pls turn off the remoter when charging, the charging time around 45 minutes.
2. pls pull out the antenna if in the building of concrete structure the operating environment to increase the signal.
3. The inner part of the remote control is lithium battery, please do not get close to the environment of high heat, high temperature and humidity.
4. If you have any other problems, pls contact the factory to deal with us.